

AUTOMATIC TRANSAXLE FLUID (ATM)

ON-VEHICLE INSPECTION


4005R-09

1. CHECK FLUID LEVEL

HINT:

Drive the vehicle so that the engine and transaxle are at normal operating temperature.

Fluid temperature: 70 - 80°C (158 - 176°F)

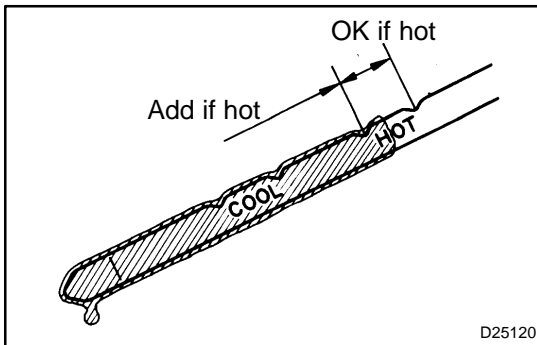

- (1) Park the vehicle on a level surface and set the parking brake.
- (2) With the engine idling and the brake pedal depressed, shift the shift lever into all positions from P to L position and return to P position.
- (3) Pull out the dipstick and wipe it clean.
- (4) Push it back fully into the pipe.
- (5) Pull it out and check that the fluid level is in the HOT position.

If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs or other parts.