


INNER REAR VIEW MIRROR ASSY REPLACEMENT

7012X-01


HINT:

- The installation procedures are the removal procedures in reverse order.
- EC mirror stands for electrochromic mirror.

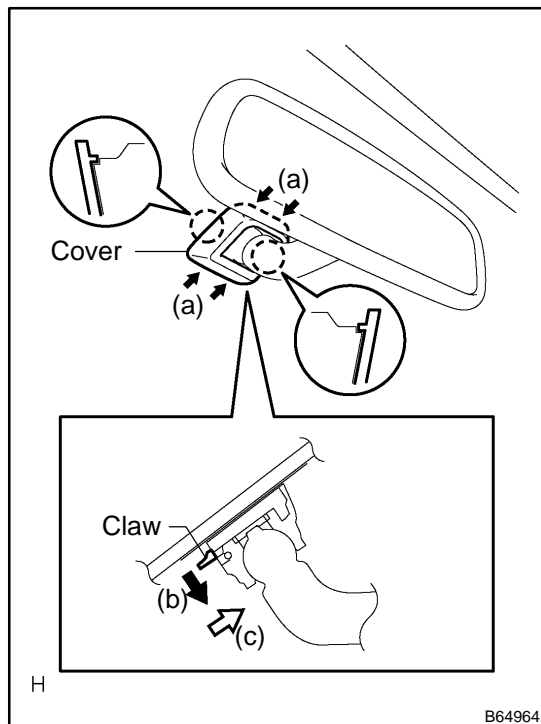


1. w/o EC mirror: REMOVE INNER REAR VIEW MIRROR ASSY

- Push the cover in the direction indicated by the arrows (a) and remove it.
- While holding down the claw in the direction of the block arrow (b), slide the inner rear view mirror assy in the direction of the white arrow (c) and remove it.

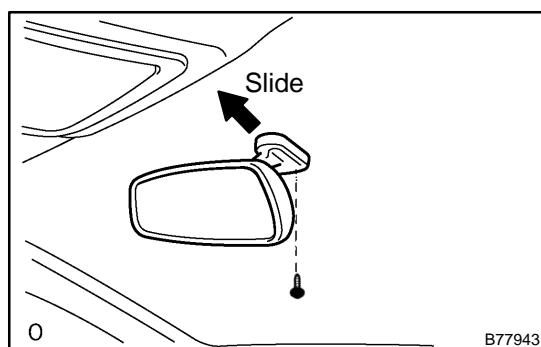

2. w/ EC mirror: REMOVE INNER REAR VIEW MIRROR ASSY

- Remove the mirror cover.
- Disconnect the connector.
- Using a torx socket wrench (T20), remove the screw.
- Slide the mirror in the direction indicated by the arrow in the illustration, and remove the mirror.

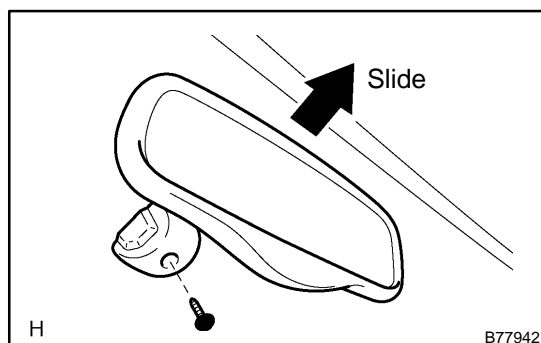

3. w/ EC mirror and compass: REMOVE INNER REAR VIEW MIRROR ASSY

- Remove the mirror cover.
- Disconnect the connector.
- Using a torx socket wrench (T20), remove the screw.
- Slide the mirror in the direction indicated by the arrow in the illustration, and remove the mirror.